 


# How to change advanced settings

## Changing Advanced Scan Settings

 
Select either **E-mail** or **Folder** and set the **destination**.

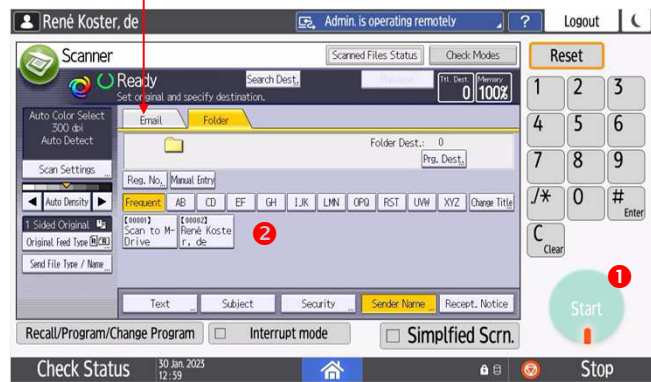

Press the **Green button** 1 to start scanning. See below for optional settings.

## Changing Advanced Copy Settings

Use one of these buttons to select the desired copy mode :[Auto Select], [Full Color] or [Black & White].

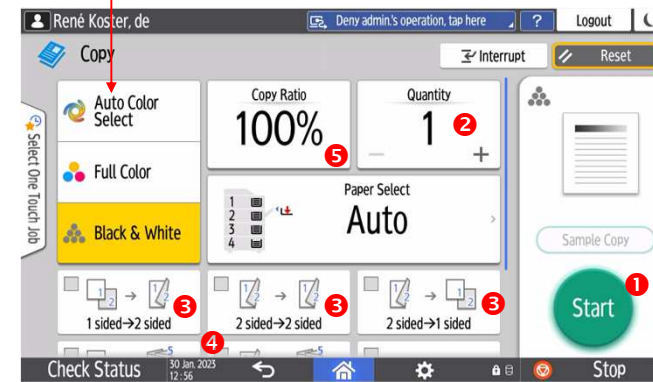

Press the **Green button** 1 to start copying. See below for optional settings.


## Setting Print Options

 Settings for your print job need to be set on your computer. From your application, press the **Printer symbol**, or use the menu option **File** and then **Print** or use the key combination (Ctrl+P) **C + p**.

Now select the WUR printer to be able to print to the RICOH multi-functional printers.

Some applications identifies the printer-option as a direct print functionality. When this option is used, your print will be processed directly by the printer, using the latest settings.

Use the **Properties** button to change settings, such as double-sided, color or black & white, stapling, Booklet etc.

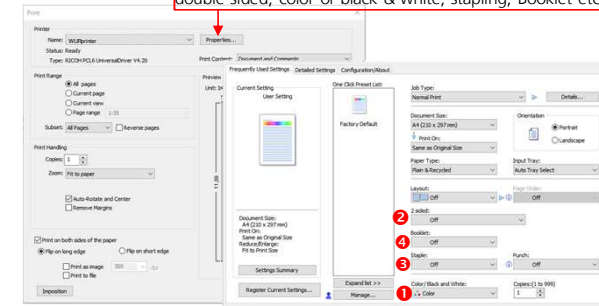

### Scan Settings

- Use **Scan Settings** to indicate whether to scan in:

**Color or Black and White**



- Also set the desired **resolution**

### Original Type

- Use **Original Feed Type** to set the desired mode for **Single sided** or **Double sided** scanning.



- Ensure your-self that the Orientation is set correct

### File Type and Name

- Determine to what kind of document type you want your document scanned and if each sheet should be a separate document or if all sheets should be in one document



- If desired, enter a **document name** here.

### Destination

- Use one of the **Short-cut buttons** 2 to set the desired **destination**
- Or enter the e-mail address manually
- Press the **Green start button** 1 to start scanning.

### To make a Copy

 
- Set the desired number of copies 2
- Press the **Green button** to make your copy 1.

### Reducing or Enlarging

- Press **Auto Reduce/Enlarge** or make a **manual selection** 5 to set the desired percentage to reduce or enlarge your copy.
- Set the desired number of copies 2.
- Press the **Green button** to make your copy 1.


### Color or Black & White

- Select here whether you want to print in **Color** or **Black & White**. 1



### Single or Double-Sided

 - Make your choice for double-sided printing. You can choose from open to left, open to top. 2



### Sort/Stack or Staple\*

- Scroll down and select the desired function for **Sorting** 4/ **Stacking** or one of the **Stapling** modes.
- Set the desired number of copies 2.
- Press the **Green button** to make your copy 1.

 
\* Note that not all of the RICOH multi-functionals are equipped with a stapling or booklet option. If stapling or booklet is needed then use a RICOH multi-functional with a finisher.

### Double-Sided copies

- Use the touch screen to select the desired function for **Double-Sided** copying 5.
- Set the desired number of copies 2.
- Press the **Green button** to make your copy 1.

### Stapling\*

- Select whether you want your document stapled.
- You can choose multiple staple options 3

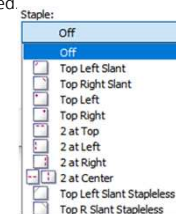

### Booklet printing\*

- Select if you want the print to be in booklet format. 4

